

# INSTALLATION DATA MANUAL MODELS 548/748/848 PRESSURE TRANSMITTERS

3829 Forest Parkway, Suite 500 Wheatfield, NY 14120 Int'l: 1-716-629-3800 Toll Free: 1-800-688-0030 Fax: 1-716-693-9162 <u>www.viatran.com</u> <u>solutions@viatran.com</u>

### **COMPANY BACKGROUND**

an is an ISO 9001:2000 certified company committed to providing high quality pressure transducers and transmitters. Established more than 40 ago, Viatran has built its reputation on providing durable, and accurate pressure sensing devices. Our products are often specifically requested egrators and engineering firms for applications ranging from the offshore oil rigs to pump control to tank and well level measurement. Viatran is called for custom modifications for applications where standard products are not available.

#### **TECHNICAL SUPPORT**

nical assistance is available Monday-Friday 8:00 AM to 5:00 PM (Eastern) from our knowledgeable factory personnel to answer any of your cation or installation questions. Our toll free number is 1-800-688-0030. Questions or additional documentation can also be requested via e-mail utions@viatran.com.

### **CUSTOMER SERVICE**

rs for additional units or accessories can be place by calling customer service at 1-800-688-0030 or by fax at 393-9162. Orders can also be placed by contacting a local representative in your area. To find the nearest representative visit our web site at viatran.com and click on rep search.

#### **PRODUCT OVERVIEW**

**UAL SCOPE:** Information contained in this document is representative of a standard Model 548/748/848. If the product has special requirements odifications, refer to the permanently marked information on the product and your purchase order for possible alteration to the product's guration. Failure to verify product configuration before installation may cause permanent product damage and in most cases, void the facturer's product warranty. If you are unsure or have questions about your product, please contact your Application Engineer (1-800-688-0030) sistance.

ove and retain all enclosed instruction manuals and performance certificates. These documents provide important information on the product's ation, operation, safety precautions, recommended maintenance, re-calibration requirements, repair service instructions and warranty nation. These documents are updated from time to time as changes to the product occur and should be reviewed at receipt so that proper and nstallation can occur.

**DUCT DESCRIPTION AND GENERAL USE:** Viatran's model X48 uses a piezoresistive sensing chip mounted behind an isolated diaphragm ructed of stainless steel. The 48 series is designed to measure process pressures in applications compatible with stainless steel. The 548, 748 48 have standard outputs of 4-20 mA, 0-5 V dc or mV/V respectively. The standard electrical connection are 6' pigtail leads potted in a ½" NPT conduit connection which can be easily connected inside a conduit connection box. Model 548, 748 and 848 are approved for use in hazardous ons by FM, CSA and ATEX for explosion proof, non-incendive and intrinsically safe. Viatran provides many standard options including alternate sure port fittings and connectors to custom fit your unit. The 548 and 748 also offers an improved linearity option to improve the accuracy of the better than 0.1% FSO best fit straight line.

### **BASIC OPERATION**


nodel X48 is pre-set at the factory for the required output and is referenced to atmospheric pressure (zero PSIG), with the exception of absolute The reference for an absolute unit is absolute zero (full vacuum). Once factory set, the product should perform as indicated by the performance cate and product labeling. Any deviation from the factory settings could indicate damage to the sensor, electronics or both. If your product is ped with zero and span adjustments the unit can be recalibrated if a calibrated pressure source is available, or by using the shunt cal if your unit upped with this option. All units are sent with a calibration card that contains the unique calibration for your Viatran unit. Please retain this sheet; d the zero or span reading vary greatly from the calibration card it may indicate damage to the sensor or some form of obstruction in the breather if equipped.

## HANDLING REQUIREMENTS AND CAUTIONS

- . All electrical & pressure connections should be compatible with the model specifications as outlined above.
- The product's internal electrical circuitry is DC isolated from case ground. It is recommended that the case ground wire be connected to earth ground at the cable termination, as this is an integral part of the internal surge protection and noise immunity features.
- On some lower range models a breather opening, with breather filter, is used to allow for proper product function. At no time should the filter be removed in service. If any mist, vapor or fluid is permitted to enter this breather without the filter, unit failure may occur.
- At no time should an object be pressed against the sensing area to deflect the sensor (to test or simulate pressure), as on some models permanent damage to the sensing diaphragm may occur.
- . When shipped in quantities, units should be packaged individually to eliminate possible damage.


## **INSTALLATION DATA - VIATRAN MODEL 548/748/848**

Note: The drawing below is for informational purposes only and is not to scale. All dimensions are nominal, in inches and for reference purposes only.

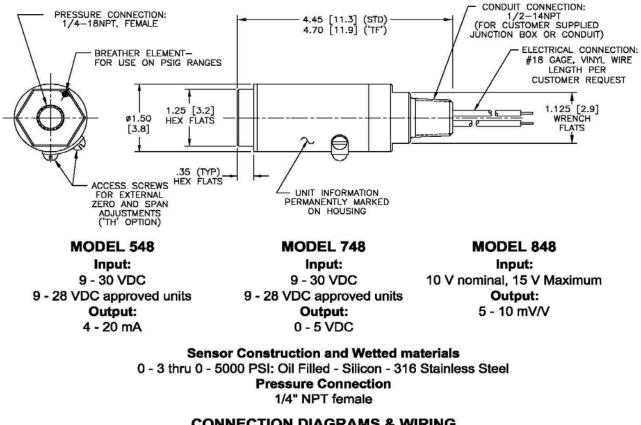


# **CONNECTION DIAGRAMS & WIRING**

Electrical Mating Connection: Acceptable 18AWG wire termination connection - 1/2" NPT (M)

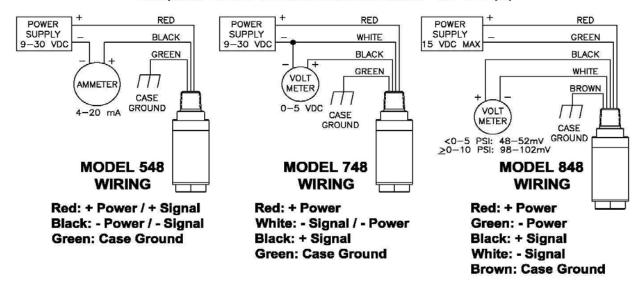

Note: If the unit is certified for hazardous locations as Intrinsically Safe, use the enclosed connection diagram. Only the pressure transmitter is considered to have the Factory Mutual, CSA or ATEX safety ratings. If you have purchased a transmitter and isolator/remote seal, they have not been tested as a system for safety certification. The end-user shall be responsible for verifying the system is safe and installed accordingly.

## **OPTIONAL APPROVALS MODEL 548**

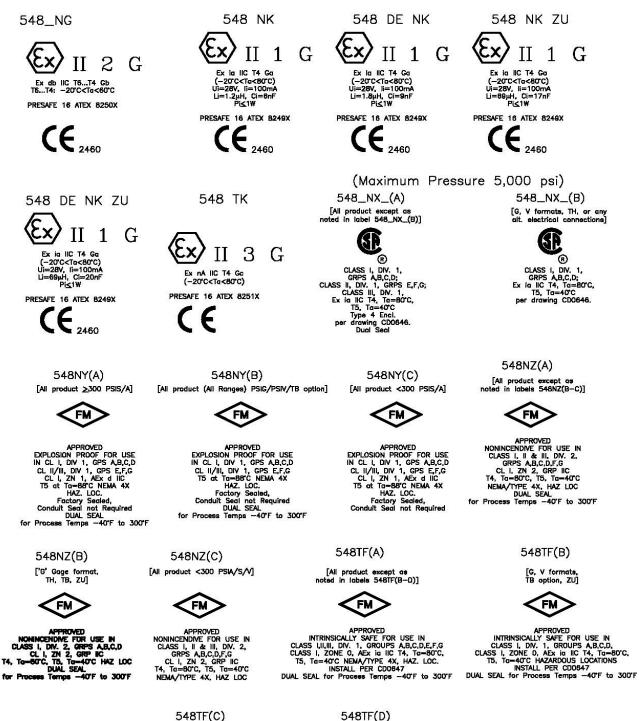

548TF(D)

[TH, All alternate lectrical connections except ZU]

FM

4


APPROVED INTRINSICALLY SAFE FOR USE IN CLASS I, IIII, DV. 1, GROUPS A.B.C.D.E.F.G CLASS I, ZONE O, AEX IO IIC T4, T0=80°C, T5, T0=40°C NEUA/TYPE 4X, HAZ. LOC. INSTALL PER CD0647

[All product <300 PSIA/S/V]

FM


APPROVED INTRINSICALLY SAFE FOR USE IN CLASS I, DIV. 1, GROUPS A.B.C.D. CLASS I, ZONE O, AEx io IIC T4, TG=80°C, T5, Tg=40°C HAZARDOUS LOCATIONS INSTALL PER CD0647

## **OPTIONAL APPROVALS MODEL 748**

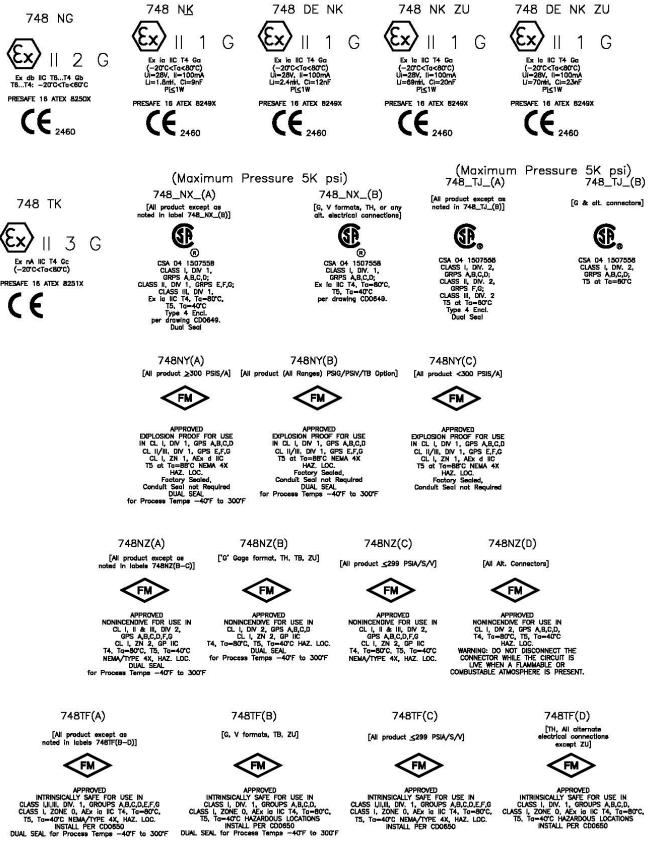

5

## OPTIONAL APPROVALS MODEL 848

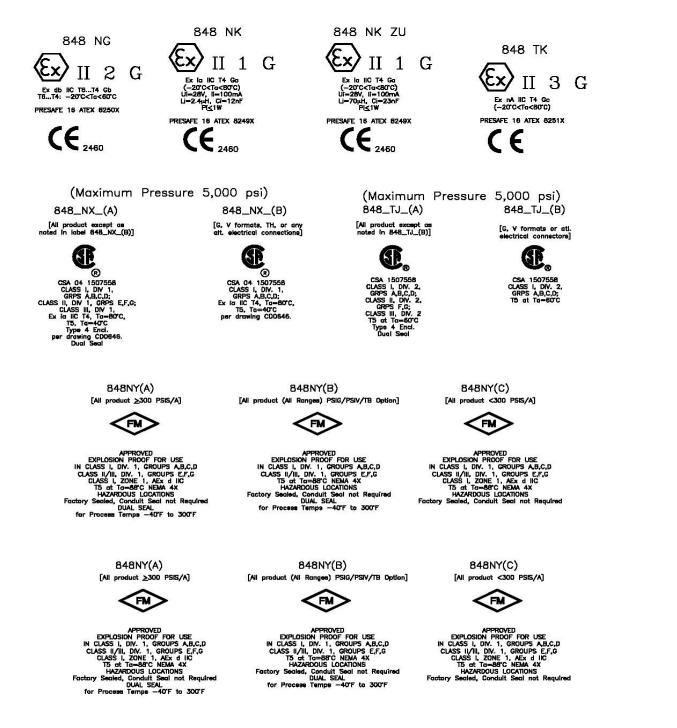

848TF(A)

[All product except as noted in labels 848TF(B-D)]



APPROVED INTRINSICALLY SAFE FOR USE IN CLASS I,II,III, DIV. 1, GROUPS A,B,C,D,E,F,G CLASS I, ZONE 0, AEx is INC T4, Ts=B0°C, T5, Ts=40°C NEMA/TYPE 4X, HAZ, LOC, INSTALL PER CDD847 DUAL SEAL for Process Temps -40°F to 300°F

848TF(B)

[G, V formats, TB, ZU]

APPROVED INTRINSICALLY SAFE FOR USE IN CLASS I, DM. 1, GROUPS A.B.C.D. CLASS I, ZONE C, AEX IS IIIC T4, TG-80°C, T5, TG-40°C MAXARDAUS LOCATIONS INSTALL PER CD047 DUAL SEAL FOR PROCESS Temps -40°F to 300°F

848TF(C)

[All product ≤299 PSIA/S/V]

FM

APPROVED INTRINSICALLY SAFE FOR USE IN CLASS I, IIII, DN. 1, GROUPS A,B,C,D,E,F,G CLASS I, ZONE Q, AEx ig IIC 14, Tg=80°C, T5, Tg=40°C NEMA/TYPE 4X, HAZ, LOC, INSTALL PER CD0647 848TF(D) [TH, All atternate electrical connection except ZU]


APPROVED INTRINSICALLY SAFE FOR USE IN CLASS I, DM. 1, GROUPS A,B,C,D, CLASS I, ZONE O, AEX in IIC 74, TO-BOTC, T5, To-40°C HAZARDUIS LOCATIONS INSTALL PER CD0047

#### **MECHANICAL INSTALLATION**

(48 series requires no special mounting equipment. The unit may be mounted directly to the process fitting in any orientation with negligible oning error. For standard NPT pressure fittings it is recommended that Teflon tape or an equivalent sealant be applied to the threads before lation. It is recommended that all NPT fittings be torque to 50 ft/lbs.

### **ELECTRICAL CONNECTIONS**

tandard wiring of your Viatran pressure transmitter is outlined on page 3. If your unit was ordered with an alternate connector or special wiring to the wiring marking permanently marked on your unit. The X48 series transmitters can be powered by a dc power supply ranging from 9 to 30 If you have a 4-20 mA (548) device please refer to the load/voltage chart (below) to identify the required input voltage for your specific system The recommended load impedance for the model 748 is 50k ohms minimum.

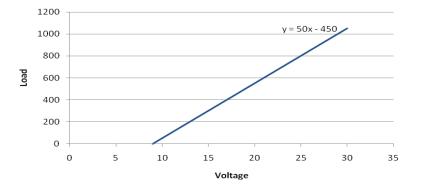

#### MAINTENANCE AND REPAIR

atran transmitters have been designed to function free from routine or scheduled maintenance. Simple cleaning of the pressure cavity on an as ed basis will provide many years of satisfactory performance. Protecting the product from continued exposure to moisture or fluids at the ical connection, breather area will eliminate premature internal failure of the product. Generally any time the product is removed from service, ressure cavity should be flushed with a stainless steel compatible cleaner to prevent media buildup. During the cleaning process only a soft, lintsloth is recommended. Never use a coarse or stiff bristle brush to clean media from the diaphragm surface.

uggested that the calibration be verified on a usage dependent schedule. If the product is in continuous service s a week, then calibration verification may be necessary every 6 to 8 months. If the product is in a lab test environment, a more lenient cation schedule would be appropriate. In all instances the performance of the product will depend on the individual application or process in n it is installed. More continued usage would require a shorter period between calibration verification and product maintenance.

roduct is perceived to be exhibiting problems, it can be returned to Viatran for analysis and/or repair. It is suggested that only Viatran personnel opt repair of the product. Any damage resulting from customer disassembly would result in a loss of coverage under the warranty policy. Older icts returned for repair are updated to current specifications unless the repair cost would outweigh the cost of a new replacement model. icts returned for repair should include information on the person to contact for repair quote approval, the individual to contact if Viatran's technical requires additional information during analysis, and a brief description of the problem associated with the product's failure.

### **REPAIR INSTRUCTIONS**

an's Transmitters are designed to be easily repaired and recalibrated if necessary. If a failure occurs, the transmitter should be returned to the ry for inspection and testing. Please contact the Customer Support Department at 1-800-688-0030, for a return tracking number and/or a repair estimate. A nominal inspection fee is charged on all units returned to the factory which are not subsequently repaired.

#### WARRANTY

an Corporation warrants that its products shall be free from defective workmanship and/or material for a period of twelve (12) months from the of shipment, provided that Viatran's obligation hereunder shall be limited to correcting any defective workmanship and/or replacing any defective rial f.o.b. factory. No allowance will be made for any expense incurred for correcting any defective workmanship and/or material without written ent by Viatran. This warranty is in lieu of all other warranties expressed or implied.